

Please fill in the names with CAPITAL letters

Date	Name 1	Name 2	Name 3	Zaliczenie
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

WLAN Laboratory

Lab 6. Wireless bridge – part 2 Cisco CLI configuration

Objective:

The students will learn how to use CLI command environment to set up wireless bridge with Cisco AP/Bridge devices.

Student Prerequisites:

- knowledge of the basic WLAN configuration,
- familiarity with the self-learning material of the course [1-3],
- basic knowledge of the Linux OS and Windows,
- basic knowledge of IPv4 addresses

Hardware and Software to be used in this lab assignment:

Two Cisco Access Points with WLAN bridge functionality (this same model), PC or laptop, two RJ45 cables., PC with WLAN card or laptop, serial console program (eg. Putty.exe), with Cisco PP: serial (RS232) cable, RJ45 Ethernet cables, on some computers a converter USB <-> RS232 is also need.

Description of the Experiment:

During the exercise students create wireless connection in bridge mode between backbone (core) network and PC, using two AP/Bridge devices and a wireless connection.

Lab goals:

- The AP1 device are connected by wire to backbone network (faculty network), AP2 are connected by wire to a PC client. AP1 and AP2 are connected with wireless link.
- The clients station (PC) should receive their IP address from the faculty DHCP server, in public IP range.

Preparation:

I) Hardware reset

We assume that the AP device is in a configured state and its current configuration is not known. The first point to perform operations is bring the machine settings to a factory initial state.

II) connection via RS232 port

Connect PC RS232 port (9 pin socket or USB converter) to AP RS232 port (RJ45 socket) with serial cable. Run console terminal program (putty.exe) and set serial port parameters to: 9600 bps, 8 data, 0 parity, 1 stop, no flow control. Open connection and pres [enter] to get started. You should to get response chars from AP (“ap>”).

Note! Remember to set up putty with proper name of serial port, check the name in Windows device manager.

III) Enter privileged mode.

To configure AP you have to enter to privileged mode.

```
ap>enable
Password: Cisco
ap#
```

Cisco is the default password. If the password has been changed, reset the AP to factory defaults. If help is needed refer to the online documentation [1].

IV) If Cisco AP are used and hardware reset are not available - Software erase the existing configuration

If there is an existing configuration on the AP, erase the configuration and reload.


```
ap#erase startup-config
...
ap#reload
...
```

NOTE!! For more information about CLI operation refer to on-line documentation [1-3].

Lab phases/tasks:

I) Bridge connection.

Set up (with CLI interface) the wireless connection in bridge mode between the PC and the core network using two bridges or access points. Properly connected bridge will allow you to download the IP address of the PC with the faculty DHCP server.

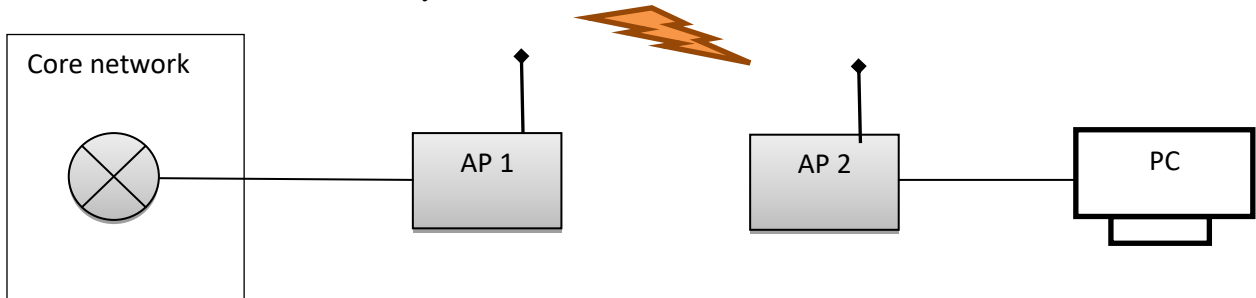

a) Step 1

AP1 and AP2 should have set static IP addresses. Propose IP/Mask addresses for each device and type in the Fig. above. Select IP from private networks (like 192.168.12.7/24).

Note! Only Cisco bridge devices provide classic bridge modes. When you use Cisco access points devices, you can apply the “workgroup bridge” mode to establish connection between two AP devices. In this case, one devices have to be set up to access point mode, second device have to be set up to “workgroup bridge” mode. Not each AP 1200 device can provide bridge or workgroup bridge modes. Write the model of used devices (AP): Identify and write below what kind of a bridge functionality (modes) are available on your device:

b) Step 2

Select 2.4 or 5 GHz band. Configure the AP1 to bridge mode (or AP mode): set the SSID name to C2_WLAN <computer_number>, set the radio channel to < computer_number >, do not set

encryption on the radio link.

Identify and type in the Figure above the MAC addresses of each NIC (check AP MAC addresses in the AP status page).

Configure the AP2 to “non root” bridge mode (or to “workgroup bridge” mode), and create the wireless connection with AP1.

Note! SSID names have to be the same on both devices. On Cisco devices you have to set up “infrastructure ssid” parameter to your SSID name. The band (2.4 or 5 GHz) have to be the same. In case of non root device you can not set manually a radio channel. In case of non root devices you can (or have to) provide MAC address of opposite bridge AP device to establish the connection. On Cisco devices are several MAC addresses (several NICs), usually you will provide MAC addresses for wireless NICs not for Ethernet NICs. For other problems please check the manufacturer documentation [1-3] to identify proper bridge (or “workgroup bridge”) connection setup.

c) Step 3

Test the connection between the AP1 and AP2 (use the ping command on CLI).

Connect network in the target configuration (see Figure above).

Test your final network (use the ping command on PC and a http:// address in a web browser).

II) Secure the Bridge connection.

a) Step 1

Change the configurations to set up AP1<->AP2 secure radio link with WPA encryption (look at lab 4 procedure).

b) Step 2

Test the connection between the AP1 and AP2 (use the ping command on CLI).

Connect network in the target configuration (see Figure above).

Test your final network (use the ping command on PC and a http:// address in a web browser).

Questions:

1. List the Cisco CLI command sequences necessary for enter into SSID configuration context.
2. List the Cisco CLI command sequence necessary for set up “workgroup bridge” functionality?
3. What 802.11 system parameters decide about the radio link range (except transmitter power and antenna type and position)?

References:

[1] Cisco IOS Software Configuration Guide for Cisco Aironet Access Points – web page:

https://www.cisco.com/c/en/us/td/docs/wireless/access_point/12-3_7_JA/configuration/guide/i1237sc.html?referring_site=bodynav

[2] Cisco IOS Command Reference for Cisco Aironet Access Points and Bridges – web page:

https://www.cisco.com/c/en/us/td/docs/wireless/access_point/12-4_3g_JA/command/reference/cr1243g.html

[3] Basic Wireless LAN Connection Configuration Example – web page:

<https://www.cisco.com/c/en/us/support/docs/wireless-mobility/wireless-lan-wlan/68005-wlan-connect.html#diag>

[4] E. Perahia, R. Stacey, “Next Generation Wireless LANs 802.11n and 802.11ac”, Cambridge University Press, 2013

[5] P. Roshan, J. Leary, “802.11 Wireless LAN Fundamentals” Cisco Press, 2004.